



X Do not use as a step ladder

To adjust back height hold back with two hands while seated and raise to desired height
To lower the back height raise back all the way to the top and release slowly

Adjustable Arms

Right Back Lever

To adjust back angle

Right 3rd Lever

To adjust seat angle (backwards)

Right 2nd Lever

To adjust seat height

Right Front Lever

To adjust seat angle (forwards)

Front Knob

To adjust weight tension

Five-star Base and Castors

Use soft tyred castors for tiles

Use hard tyred castors for carpet

- » Vacuum regular
- » Regularly adjust mechanism angle
- » Regularly adjust gas height
- » All warranty claims to be forwarded to place of purchase
- » Warranty covers components and workmanship only
- » Damage or wear and tear not covered by warranty
- » Misuse or abuse will not be covered under warranty